

# DLL-call flowchart for FIFO imaging

For information about the dll-functions [SPC\_...()] see the [SPCM-DLL Description](#) document. It contains a list of all functions, information about the width and nature of the used type names (see section "Using DLL functions in LabView environment") as well as a description for every function including its input arguments and return values.

